






Cutout Required: 16mm

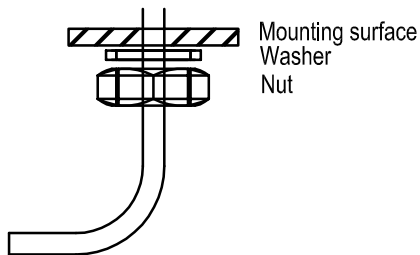

(1) Hold fibre optic tail gently and thread through nut, 1 plastic washer and mounting surface.

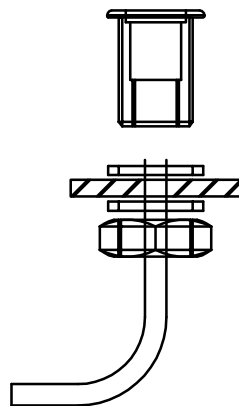

(2) Thread the ferrule end of the tail through the other plastic washer and screw onto the paver fitting.

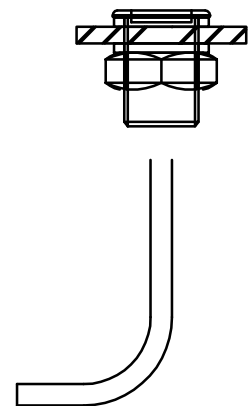

(3) Securely tighten nut onto back of paver fitting.