


# FIBRE OPTIC CRYSTAL FITTING GUIDE

UFO CR1 / UFO CR2 / UFO CR3 / UFO CR4




## CRYSTAL FITTING / NO MOUNTING TUBE

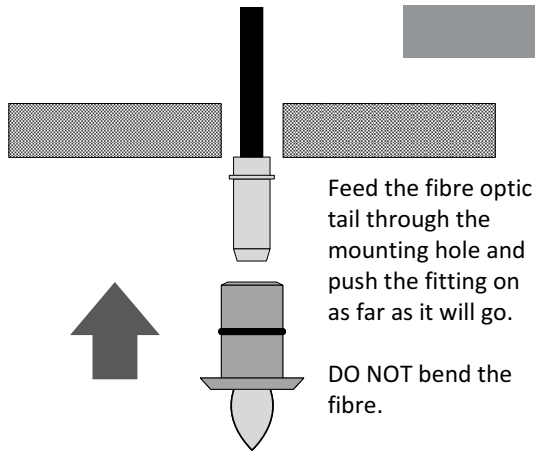

Feed the fibre optic tail through the mounting hole and push the fitting on as far as it will go.


DO NOT bend the fibre.

1

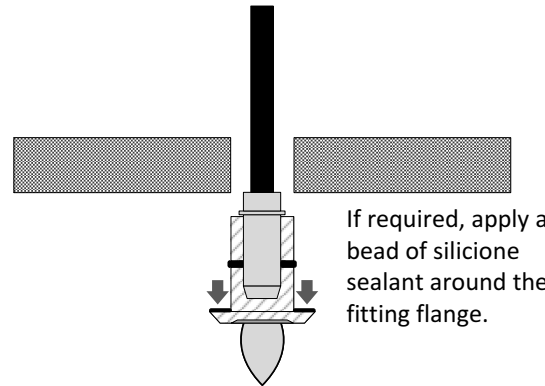

If required, apply a bead of silicone sealant around the fitting flange.

2

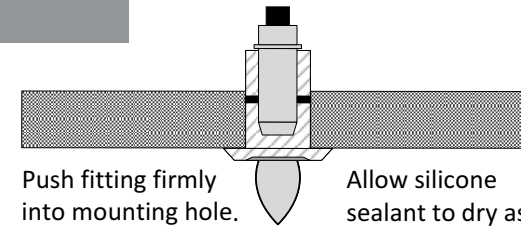


Push fitting firmly into mounting hole.

Allow silicone sealant to dry as per product instructions.

3


## CRYSTAL FITTING / WITH MOUNTING TUBE

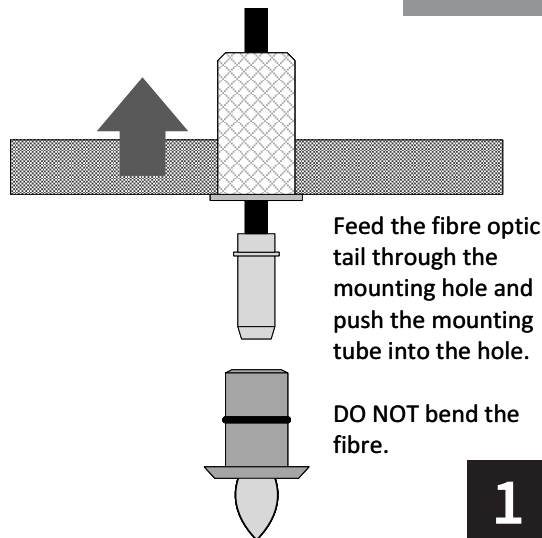

Feed the fibre optic tail through the mounting hole and push the mounting tube into the hole.


DO NOT bend the fibre.

1

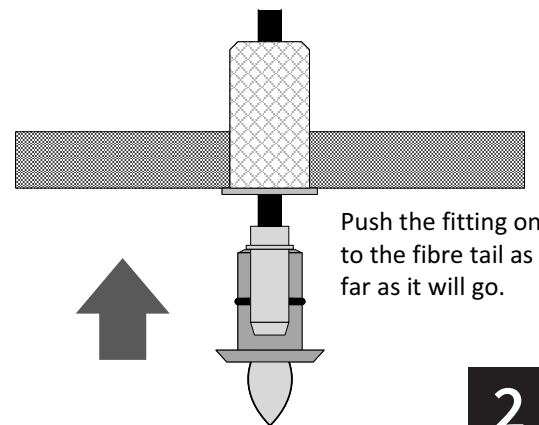

Push the fitting on to the fibre tail as far as it will go.

2

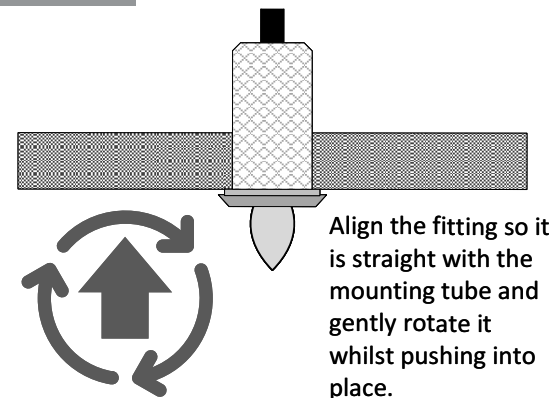

Align the fitting so it is straight with the mounting tube and gently rotate it whilst pushing into place.

3

### HOLE CUTOUT SIZES

C-PB	Ø10.6mm / 0.42"
C-W	Ø11.4mm / 0.45"
T-PB	Ø11.8mm / 0.46"
T-W	Ø12.0mm / 0.47"

C-PB = crystal fitting into plasterboard.

C-W = crystal fitting into MDF/hardboard/ply etc.

T-PB = mounting tube into plasterboard.

T-W = mounting tube into MDF/hardboard/ply etc.

### MOUNTING TUBES

Crystal fittings can be fitted either on their own or by using plastic mounting tubes.

These allow the crystals to be mounted through single or double skinned ceilings or insulation in sauna rooms.

Tubes are available in 25mm, 80mm or 135mm lengths.

The installation procedure for all 3 lengths is identical.

Note that this guide is indicative only. Installation of these fittings is dependant on the surface they are being installed in and local environmental conditions.

find us online: [uk]www.ufo.lighting

[usa]www.fiberopticlighting.com

[de]www.ufo-licht.de